

REAR BENCH SEAT ASSEMBLY: EXPLODED VIEW

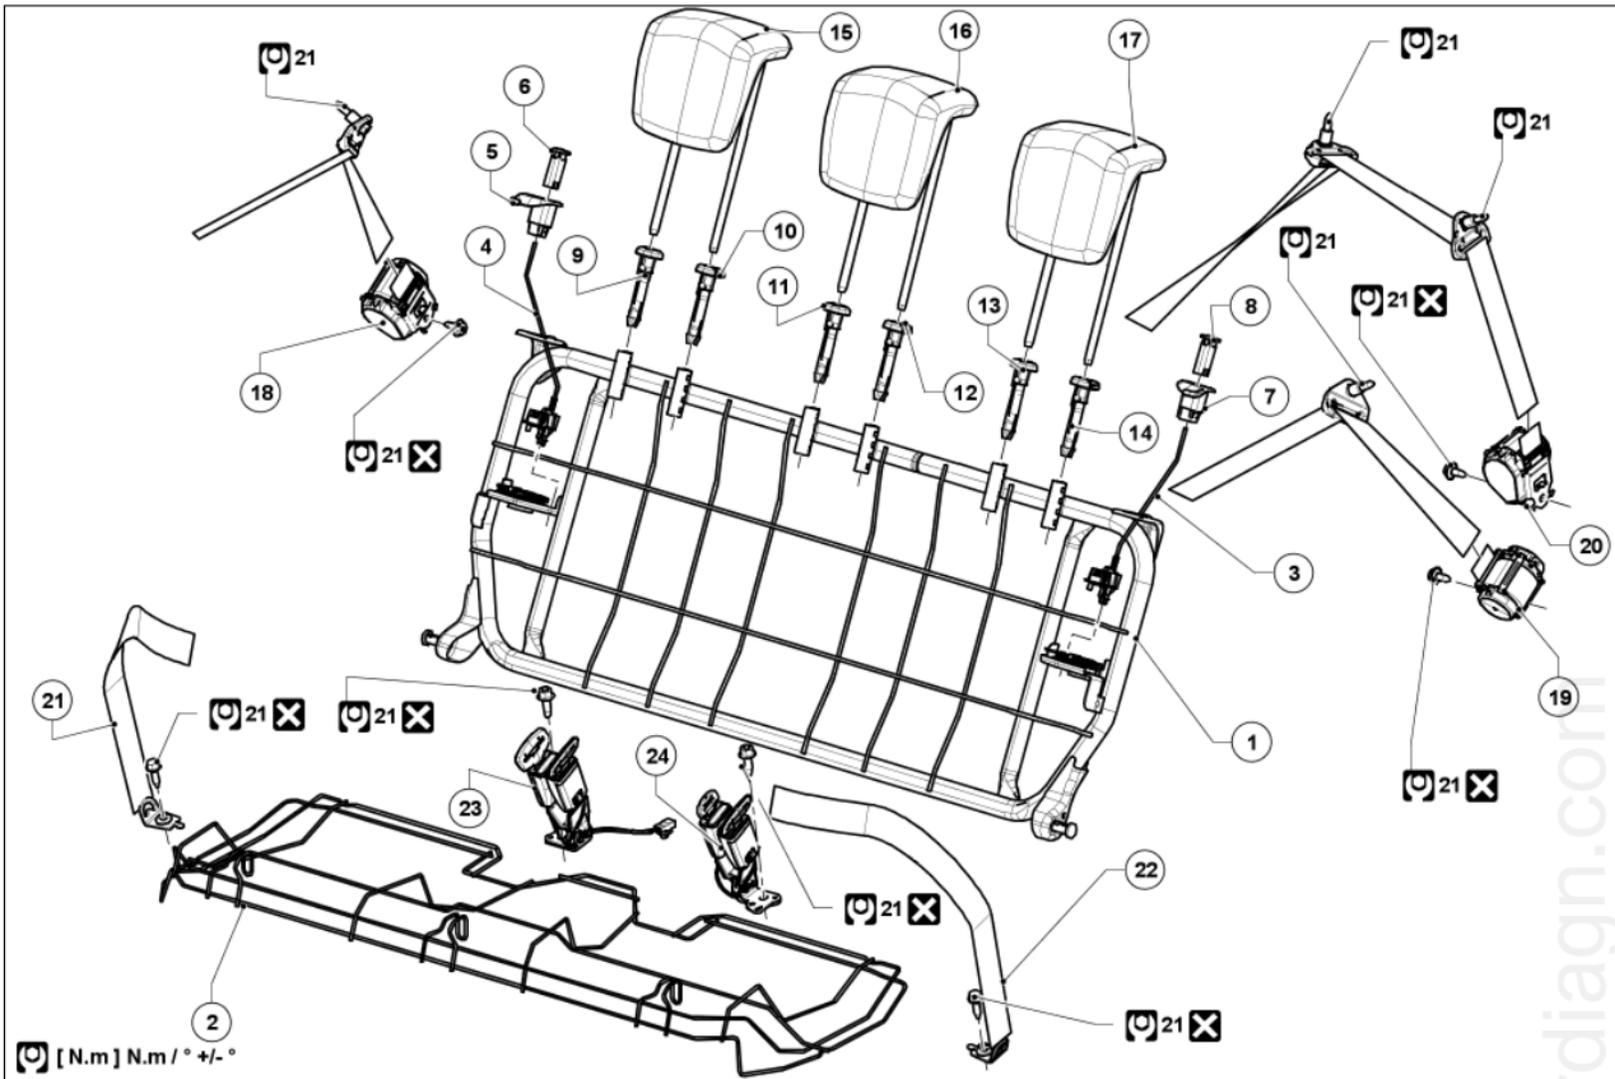


Illustration key: Description .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Rear bench seatback frame	
2	Rear bench seat base frame	(see 76A, Rear seat frames and mechanisms, Rear bench seat base: Removal - Refitting)
3	Rear seat lock bar	
4	Rear seat lock bar	
5	Unlocking control of rear bench seatback	
6	Unlocking control of rear bench seatback	
7	Unlocking control of rear bench seatback	
8	Unlocking control of rear bench seatback	
9	Rear bench seat headrest guide	
10	Rear bench seat headrest guide	
11	Rear bench seat headrest guide	
12	Rear bench seat headrest guide	
13	Rear bench seat headrest guide	
14	Rear bench seat headrest guide	
15	Rear bench seat headrest	
16	Rear bench seat central headrest	
17	Rear bench seat headrest	
18	Rear bench seat belt	
19	Rear bench seat belt	
20	Rear bench seat belt	
21	Rear bench seat belt	
22	Rear bench seat belt	
23	Rear bench seat belt buckle	
24	Rear bench seat belt buckle	

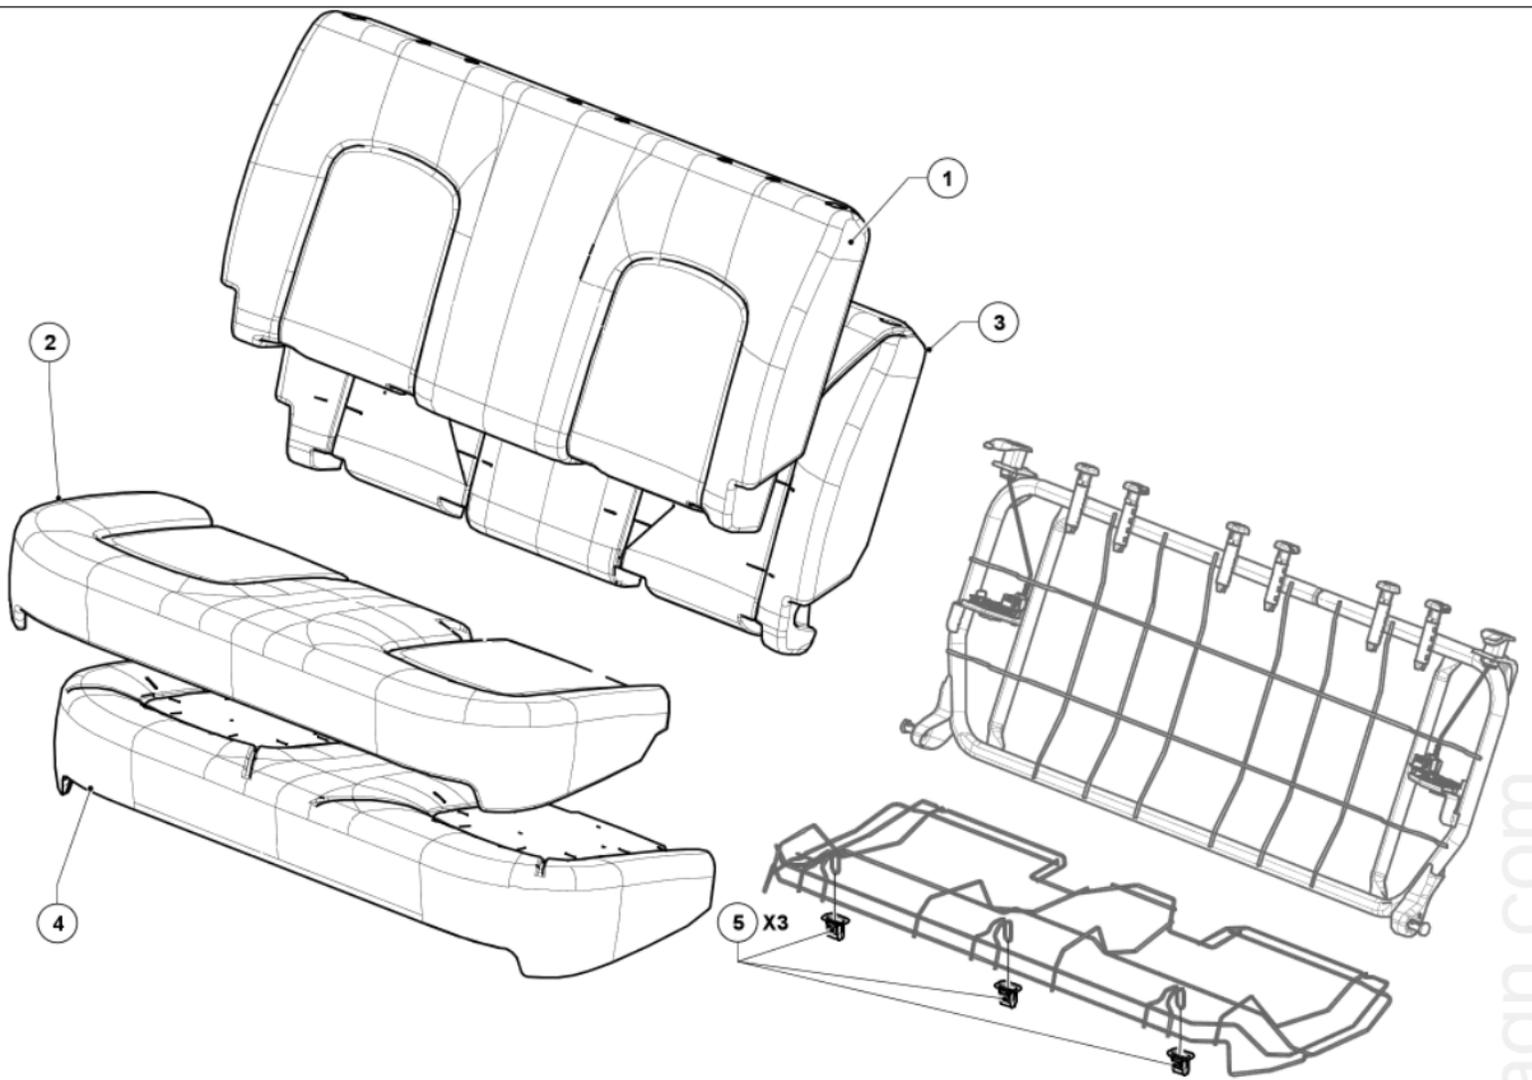


Illustration key: [Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Rear bench seatback cover	
2	Rear bench seat base cover	
3	Rear bench seatback foam	
4	Rear bench seat base foam	
5	Rear bench seat mounting on body	



Repair-70x13x02-02x50-1-6-1.xml



SSL version: 3.02 du 22/07/11

REAR BENCH SEAT BASE: REMOVAL - REFITTING



parts always to be replaced:




[Rear bench seat mounting on body](#)

- Location and specifications (tightening torques, parts always to be replaced, etc.) ([see 76A, Rear seat frames and mechanisms, Rear bench seat assembly: Exploded view](#)).

REMOVAL

1. REMOVAL PREPARATION OPERATION

2. REMOVAL OPERATION

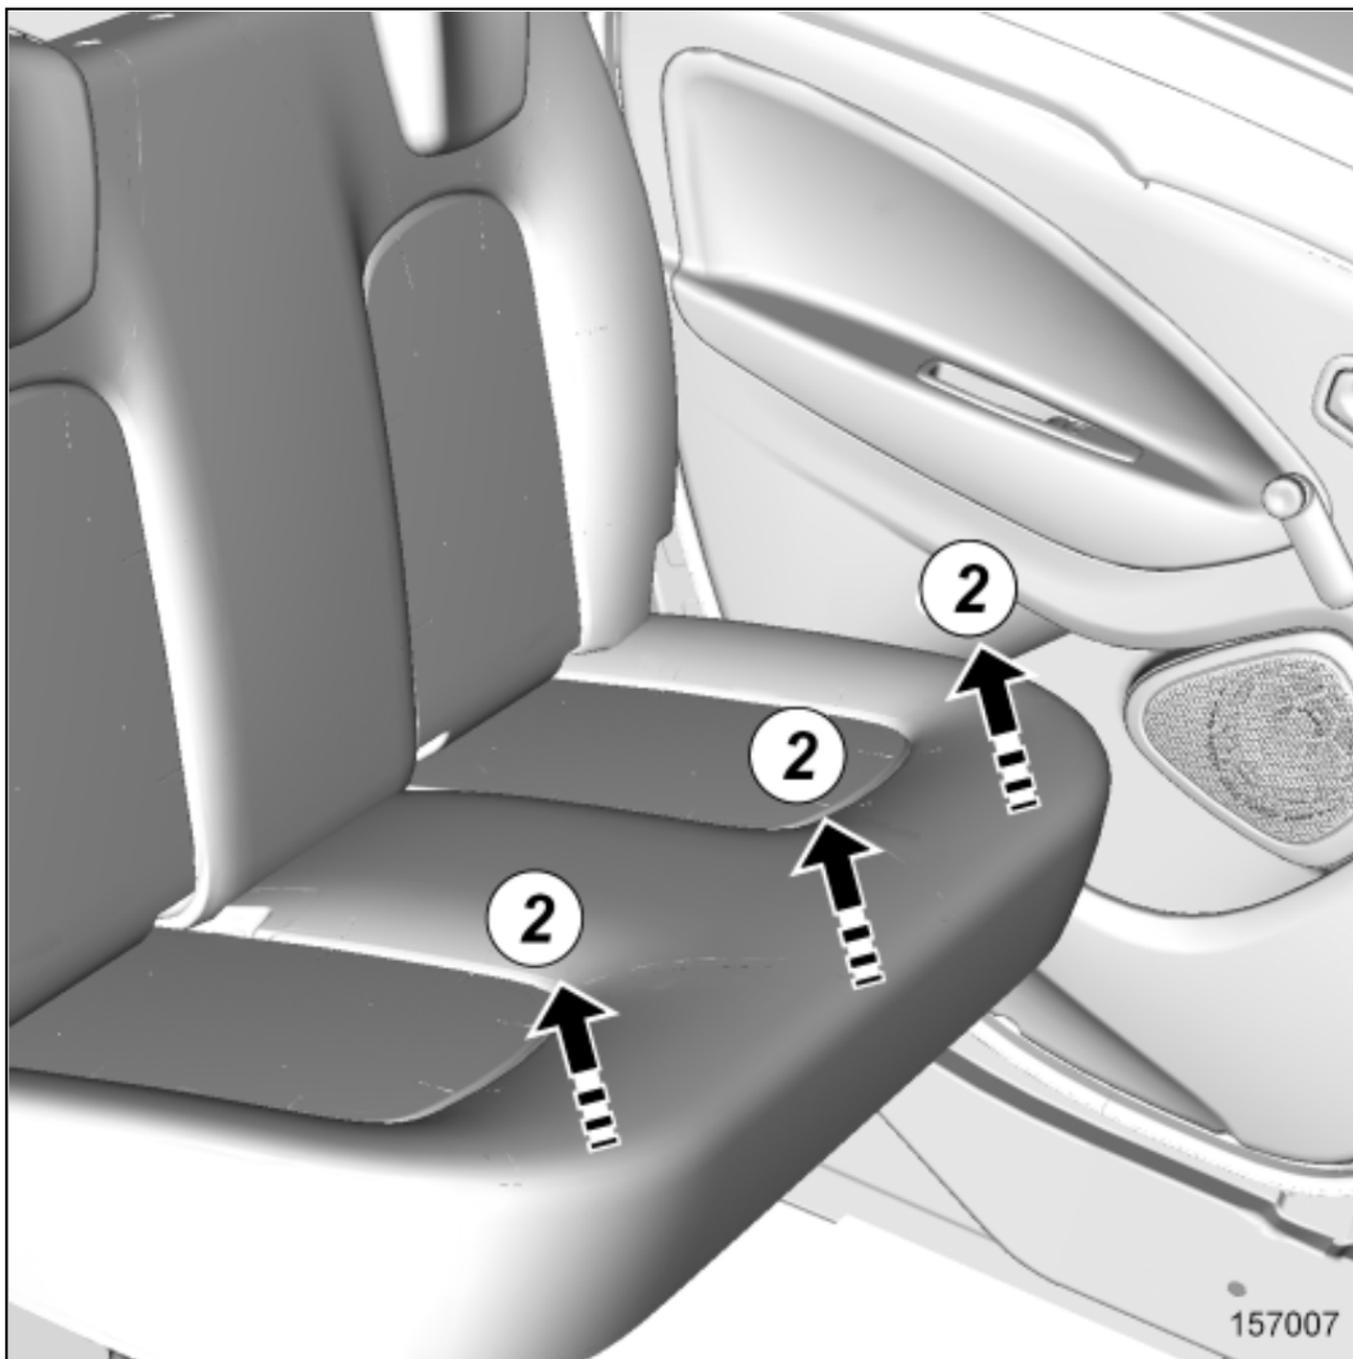

- Unclip the rear bench seat base by pulling it forcefully towards(2) .

Note:



The locking clip of the rear bench seat base mounting clips always breaks whenever the rear bench seat base is removed.

It is necessary to use a vacuum cleaner and an air gun to recover the clip pieces remaining in the body.

REFITTING

1. REFITTING PREPARATION OPERATION



parts always to be replaced:  Rear bench seat mounting on body .

2. REFITTING OPERATION

 Proceed in the reverse order to removal.

Note:



When refitting the rear bench seat base, check that the mountings of the rear bench seat base frame are correctly locked on the body by listening for the "clip".

3. FINAL OPERATION

 Proceed in the reverse order to removal.



Repair-70x13x02x02-01x37-1-10-1.xml



XSL version : 3.02 du 22/07/11