

Foscam IPCamera CGI User Guide



Contents

General description.....	1
AV Function.....	2
getImageSetting.....	2
setBrightness.....	2
setContrast.....	2
setHue.....	3
setSaturation.....	3
setSharpness.....	3
resetImageSetting.....	3
getMirrorAndFlipSetting.....	4
mirrorVideo.....	4
flipVideo.....	4
getRatio.....	5
setRatio.....	5
getH264FrmRefMode.....	5
setH264FrmRefMode.....	6
getScheduleRecordStreamChn.....	6
setScheduleRecordStreamChn.....	6
setPwrFreq.....	7
getVideoStreamParam.....	7
setVideoStreamParam.....	7
getSubVideoStreamParam.....	8
setSubVideoStreamParam.....	8
getMainVideoStreamType.....	9
getSubVideoStreamType.....	9
setMainVideoStreamType.....	9
setSubStreamFormat.....	10
GetMJStream.....	10
getOSDSetting.....	11
setOSDSetting.....	11
getOsdMaskArea.....	11
setOsdMaskArea.....	12
getOSDMask.....	12
setOSDMask.....	12
getMotionDetectConfig.....	13
setMotionDetectConfig.....	14
setLocalAlarmRecordConfig.....	15
getLocalAlarmRecordConfig.....	16
getSnapConfig.....	16
setSnapConfig.....	16
getScheduleSnapConfig.....	17
setScheduleSnapConfig.....	17
snapPicture.....	18

snapPicture2.....	19
getRecordList.....	19
getRecordList2.....	19
reloadRecordindex.....	20
getAlarmRecordConfig.....	20
setAlarmRecordConfig.....	20
getRecordPath.....	21
getScheduleRecordConfig.....	21
setScheduleRecordConfig.....	22
setIOAlarmConfig.....	23
getIOAlarmConfig.....	23
clearIOAlarmOutput.....	24
setPCAudioAlarmCfg.....	24
getPCAudioAlarmCfg.....	24
getMultiDevList.....	25
getMultiDevDetailInfo.....	25
addMultiDev.....	25
delMultiDev.....	26
User account.....	26
addAccount.....	26
delAccount.....	27
changePassword.....	27
changeUserName.....	27
changeUserNameAndPwdTogether.....	28
logIn.....	28
logOut.....	29
getSessionList.....	29
getUserList.....	29
usrBeatHeart.....	30
PTZ Control.....	30
ptzMoveUp.....	30
ptzMoveDown.....	31
ptzMoveLeft.....	31
ptzMoveRight.....	31
ptzMoveTopLeft.....	31
ptzMoveTopRight.....	32
ptzMoveBottomLeft.....	32
ptzMoveBottomRight.....	32
ptzStopRun.....	32
ptzReset.....	33
getPTZSpeed.....	33
setPTZSpeed.....	33
getPTZPresetPointList.....	34
ptzAddPresetPoint.....	34

ptzDeletePresetPoint.....	34
ptzGotoPresetPoint.....	35
ptzGetCruiseMapList.....	35
ptzGetCruiseMapInfo.....	35
ptzSetCruiseMap.....	36
ptzDelCruiseMap.....	36
ptzStartCruise.....	36
ptzStopCruise.....	37
setCruiseTime.....	37
getCruiseTime.....	37
setCruiseTimeCustomed.....	37
getCruiseTimeCustomed.....	38
setCruiseLoopCnt.....	38
getCruiseLoopCnt.....	38
setCruiseCtrlMode.....	39
getCruiseCtrlMode.....	39
setCruisePrePointLingerTime.....	39
getCruisePrePointLingerTime.....	39
zoomIn.....	40
zoomOut.....	40
zoomStop.....	40
getZoomSpeed.....	41
setZoomSpeed.....	41
setPTZSelfTestMode.....	41
getPTZSelfTestMode.....	42
setPTZPrePointForSelfTest.....	42
getPTZPrePointForSelfTest.....	42
set485Info.....	43
get485Info.....	43
Network.....	44
getIPInfo.....	44
setIpInfo.....	44
refreshWifiList.....	45
getWifiList.....	45
setWifiSetting.....	45
getWifiConfig.....	46
getPortInfo.....	47
setPortInfo.....	48
getUPnPConfig.....	48
setUPnPConfig.....	49
getDDNSConfig.....	49
setDDNSConfig.....	49
setFtpConfig.....	50
getFtpConfig.....	50

testFtpServer.....	51
getSMTPConfig.....	51
setSMTPConfig.....	52
smtpTest.....	52
setP2PEnable.....	53
getP2PEnable.....	53
setP2PPort.....	54
getP2PPort.....	54
getP2PInfo.....	54
getPPPoEConfig.....	54
setPPPoEConfig.....	55
Device manage.....	55
setSystemTime.....	55
getSystemTime.....	56
openInfraLed.....	57
closeInfraLed.....	57
getInfraLedConfig.....	57
setInfraLedConfig.....	58
getScheduleInfraLedConfig.....	58
setScheduleInfraLedConfig.....	58
getDevState.....	59
getDevName.....	60
setDevName.....	60
getDevInfo.....	60
getProductModel.....	61
getProductModelName.....	61
getProductLanguage.....	62
getProductSensorType.....	62
getProductWifiType.....	62
getProductSdFlag.....	62
getProductOutdoorFlag.....	63
getProductPtFlag.....	63
getProductZoomFlag.....	63
getProductRs485Flag.....	64
getProductIoAlarmFlag.....	64
getProductOnvifFlag.....	64
getProductP2pFlag.....	64
getProductWpsFlag.....	65
getProductAudioFlag.....	65
getProductTalkFlag.....	65
getProductAppVer.....	66
getProductAllInfo.....	66
getGeneratePubKey.....	67
toolResetToFactory.....	67

System.....	68
rebootSystem.....	68
restoreToFactorySetting.....	68
exportConfig.....	68
ImportConfig.....	69
FwUpgrade.....	69
MISC.....	70
getFirewallConfig.....	70
setFirewallConfig.....	70
getLog.....	70

History

Ver	Auth	Edit date	Changes
1.0.0	XiaoJinsheng	2012-11-21	V1.0.0
1.0.1	Houzhen	2012-12-09	Add the following CGI command to set PT startup position: <ol style="list-style-type: none"> 1) setPTZSelfTestMode 2) getPTZSelfTestMode 3) setPTZPrePointForSelfTest 4) getPTZPrePointForSelfTest
1.0.2	XiaoJinsheng	2013-01-29	<ol style="list-style-type: none"> 1. Add a snap CGI(snapPicture2) which retrun jpeg image data directly but a image url 2. Add MotionJpeg stream support
1.0.3	Houzhen	2013-6-5	Check and Modify CGI command document
1.0.4	Limaike	2013-6-8	CGI command check
1.0.5	Houzhen	2013-9-25	<ol style="list-style-type: none"> 1.Add note for GetMJStream, defects of Firefox; 2.Modify Command: setContrast、mirrorVideo、flipVideo、logIn、setSnapConfig 、 setPTZSpeed 、 setInfraLedConfig 、 setSubStreamFormat 、 setPortInfo、 getPortInfo; 3.Add command: getLocalAlarmRecordConfig ; setLocalAlarmRecordConfig; getP2PEnable ; setP2PEnable ; getP2PPort ; setP2PPort ; setOSDMask ; getOSDMask ; getScheduleSnapConfig ; setScheduleSnapConfig;
1.0.6	Houzhen	2013-12-12	<ol style="list-style-type: none"> 1.Add command: -changeUserNameAndPwdTogether; -getPCAudioAlarmCfg; -setPCAudioAlarmCfg; -setH264FrmRefMode; -getH264FrmRefMode; -setCruiseTime; -getCruiseTime;

			-setSubVideoStreamParam; -getSubVideoStreamParam; -setCruiseTimeCustomed; -getCruiseTimeCustomed; -setCruiseLoopCnt; -getCruiseLoopCnt; -setCruiseCtrlMode; -getCruiseCtrlMode; -setCruisePrePointLingerTime; -getCruisePrePointLingerTime; -getScheduleRecordStreamChn; -setScheduleRecordStreamChn; -getProductModel; -getProductModelName; -getProductLanguage; -getProductSensorType; -getProductWifiType; -getProductSdFlag; -getProductOutdoorFlag; -getProductPtFlag; -getProductZoomFlag; -getProductRs485Flag; -getProductIoAlarmFlag; -getProductOnvifFlag; -getProductP2pFlag; -getProductWpsFlag; -getProductAudioFlag; -getProductTalkFlag; -getProductAppVer; -getProductAllInfo; -getGeneratePubKey; -toolResetToFactory; -setScheduleInfraLedConfig; -getScheduleInfraLedConfig; 2.Modify Login error code-5、-7;
1.0.7	Houzhen	2013-12-14	Modify Command: 1.The usage of command-setSubStreamFormat, getSnapConfig, setSnapConfig.

			2.The example and description of command-setMotionDetectConfig, setScheduleSnapConfig, setIOAlarmConfig
1.0.8	Houzhen	2014-1-17	1.Add commmad: getRecordList2,reloadRecordindex
1.0.9	Houzhen	2014-3-15	1.Add command: getRatio, setRatio 2.Modify command: 1) The example of command: setCruisePrePointLingerTime, getCruisePrePointLingerTime. 2) The return discription of command: getProductWpsFlag. 3) The Param of command:smtpTest.
1.0.10	Houzhen	2014-4-2	1.Add commmad:getPPPoEConfig, setPPPoEConfig,getRecordPath,getScheduleRecordConfig,getP2PInfo; 2.Modify the priviage of command for security: changePassword,changeUserName,changeUserNameAndPwdTogether,getSessionList,getUserList,getImageSetting,getMirrorAndFlipSetting, getMotionDetectConfig,getScheduleSnapConfig,getVideoStreamParam,getSubVideoStreamParam,getMainVideoStreamType,getSubVideoStreamType,getH264FrmRefMode,getSnapConfig, getOsdMaskArea,getOSDSetting,getOSDMask,getPTZSpeed,get485Info,getPTZPresetPointList,ptzGetCruiseMapList,ptzGetCruiseMapInfo, getPTZSelfTestMode,getPTZPrePointForSelfTest,getCruiseTime,getCruiseTimeCustomed, getCruiseLoopCnt,getCruiseCtrlMode,getCruisePrePointLingerTime,getZoomSpeed,getSMTPConfig, getIPInfo,getPortInfo,getUPnPConfig, getDevInfo,getDevName,getFirewallConfig,getSystemTime,getFtpConfig,testFtpServer,getDDNSConfig, getLog,getRecordList,getRecordList2,reloadRecordindex, getScheduleRecordStreamChn,getAlarmRecordConfig,getLocalAlarmR

			ecordConfig,getPCAudioAlarmCfg,getIOAlarmConfig,getDevState,getInfraLedConfig,getScheduleInfraLedConfig,getP2PEnable,getP2PPort
--	--	--	---------------------------------------------------------------------------------------------------------------------------------

General description

- Our device can only support authentication by pass user name or password attached at CGI request string currently.

For example:

`http://192.168.1.2/cgi-bin/CGIProxy.fcgi&usr=admin&pwd=123&cmd=ABC`

- We only support GET and POST method. Only importConfig and fwUpgrade can support POST method.

- The cgi request string must be encode in url format. URL encode rule:

The following chars will not be encoded:

`[A~Z] [a~z] [0~9] + @ * /`

The other chars will be encoded into hex format.

For example:

`http://192.168.1.6:88/cgi-bin/CGIProxy.fcgi?usr=admin&pwd=&cmd=getIPInfo`

will be encode to:

`http://192.168.1.6:88/cgi-bin/CGIProxy.fcgi?usr%3Dadmin%26pwd%3D%26cmd%3DgetIPInfo`

- cgi execute result

1) We orgnize the cgi execute result as xml format, for example:

```
<CGI_Result>
  <result>0</result>
  <isDHCP>1</isDHCP>
  <ip>192.168.1.8</ip>
  <gate>0.0.0.0</gate>
  <mask>255.255.255.0</mask>
  <dns1>0.0.0.0</dns1>
  <dns2>0.0.0.0</dns2>
</CGI_Result>
```

`<result></result>` means the common execute result

value	mean
0	Success
-1	CGI request string format error
-2	Username or password error
-3	Access deny
-4	CGI execute fail
-5	Timeout
-6	Reserve
-7	Unknown error
-8	Reserve

AV Function

getImageSetting

Function	Get color attribute of video	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getImageSetting	
Param	None	
Return	brightness	0~100
	contrast	0~100
	hue	0~100
	saturation	0~100
	sharpness	0~100
	denoiseLevel	Not use
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getImageSetting&usr=admin&pwd=	

setBrightness

Function	Set brightness of video	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setBrightness	
Param	brightness	0~100
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setBrightness&brightness=50&usr=admin&pwd=	

setContrast

Function	Set contrast of video	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setContrast	
Param	contrast	0~100
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setContrast&contrast=50&usr=admin&pwd=	

setHue

Function	Set hue of video	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setHue	
Param	hue	0~100
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setHue&hue=50&usr=admin&pwd=	

setSaturation

Function	Set saturation of video	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setSaturation	
Param	saturation	0~100
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setSaturation&saturation=50&usr=admin&pwd=	

setSharpness

Function	Set sharpness of video	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setSharpness	
Param	sharpness	0~100
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setSharpness&sharpness=50&usr=admin&pwd=	

resetImageSetting

Function	Reset color parameters to default value	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=resetImageSetting	
Param	None	

Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=resetImageSetting&usr=admin&pwd=

getMirrorAndFlipSetting

Function	Get mirror and flip attribute of video	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getMirrorAndFlipSetting	
Param	None	
Return	isMirror	0 Not mirred
		1 Mirred
	isFlip	0 Not filpped
		1 Flipped
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getMirrorAndFlipSetting&usr=admin&pwd=	

mirrorVideo

Function	Mirror video	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=mirrorVideo	
Param	isMirror	0 Not mirror
		1 Mirror
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=mirrorVideo&isMirror=1&usr=admin&pwd=	

flipVideo

Function	Flip video	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=flipVideo	
Param	isFlip	0 Not flip
		1 Flip

Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=flipVideo&isFlip=1&usr=admin&pwd=

getRatio

Function	Get value for image distortion correction	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getRatio	
Param	None	
Return	ratio	Three ranks for image distortion correction High:150. Middle:210. Low:430.
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getRatio&usr=admin&pwd=	

setRatio

Function	Set value for image distortion correction	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setRatio	
Param	ratio	1. 0-511, value for image distortion correction. 2. Three ranks, High:0-150. Middle:151-430. Low:431-511. 3. Default, Middle.
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setRatio&ratio=150&usr=admin&pwd=	

getH264FrmRefMode

Function	Get frame shipping reference mode of H264 encode stream
privilege	admin

Usage	/cgi-bin/CGIProxy.fcgi?cmd=getH264FrmRefMode	
Param	None	
Return	mode	0 Normal reference mode
		1 Two frames are separated by four skipping frames
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getH264FrmRefMode&usr=admin&pwd=	

setH264FrmRefMode

Function	Set frame shipping reference mode of H264 encode stream	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setH264FrmRefMode	
Param	mode	0 Normal reference mode
		1 Two frames are separated by four skipping frames
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setH264FrmRefMode&mode=0&usr=admin&pwd=	

getScheduleRecordStreamChn

Function	Get stream channel for schedule record	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getScheduleRecordStreamChn	
Param	None	
Return	chn	0 main stream
		1 sub stream
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getScheduleRecordStreamChn&usr=admin&pwd=	

setScheduleRecordStreamChn

Function	Set stream channel for schedule record	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setScheduleRecordStreamChn	
Param	chn	0 main stream

		1 sub stream
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setScheduleRecordStreamChn&chn=0&usr=admin &pwd=	

setPwrFreq

Function	Set power freq of sensor	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setPwrFreq	
Param	freq	0 60HZ
		1 50HZ
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setPwrFreq&freq=0&usr=admin&pwd=	

getVideoStreamParam

Function	Get video stream param	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getVideoStreamParam	
Param	None	
Return	resolutionN	Resolution of stream type N
	bitRateN	Bit rate of stream type N (20480~2097152)
	frameRateN	Frame rate of stream type N
	GOPN	P frames between I frame of stream type N
	isVBRN	Not in use currently
Note	N means streamType [0~3]	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getVideoStreamParam&usr=admin&pwd=	

setVideoStreamParam

Function	Set the video stream param of stream N	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setVideoStreamParam	

Param	streamType	0~3
	resolution	Resolution of stream type N
	bitRate	Bit rate of stream type N (20480~2097152)
	frameRate	Frame rate of stream type N
	GOP	P frames between I frame of stream type N The suggest value is: X * frameRate
	isVBR	Not in use currentlly
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setVideoStreamParam&streamType=0&resolution=0&bitRate=2097152&frameRate=30&GOP=30&isVBR=0&usr=admin&pwd=	

getSubVideoStreamParam

Function	Get sub video stream param	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getSubVideoStreamParam	
Param	None	
Return	resolutionN	Resolution of stream type N
	bitRateN	Bit rate of stream type N (20480~2097152)
	frameRateN	Frame rate of stream type N
	GOPN	P frames between I frame of stream type N
	isVBRN	Not in use currentlly
Note	N means streamType [0~3]	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getSubVideoStreamParam&usr=admin&pwd=	

setSubVideoStreamParam

Function	Set the sub video stream param of stream N	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setSubVideoStreamParam	
Param	streamType	0~3
	resolution	Resolution of stream type N
	bitRate	Bit rate of stream type N (20480~2097152)
	frameRate	Frame rate of stream type N
	GOP	P frames between I frame of stream type N The suggest value is: X * frameRate

	isVBR	Not in use currently
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setSubVideoStreamParam&streamType=0&resolution=0&bitRate=2097152&frameRate=30&GOP=30&isVBR=0&usr=admin&pwd=	

getMainVideoStreamType

Function	Get the stream type of main stream	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getMainVideoStreamType	
Param	None	
Return	streamType	The stream type 0~3
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getMainVideoStreamType&usr=admin&pwd=	

getSubVideoStreamType

Function	Get the stream type of sub stream	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getSubVideoStreamType	
Param	None	
Return	streamType	The stream type 0~3
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getSubVideoStreamType&usr=admin&pwd=	

setMainVideoStreamType

Function	Set the stream type of main stream	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setMainVideoStreamType	
Param	streamType	The stream type 0~3
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setMainVideoStreamType&streamType=0&usr=admin&pwd=	

setSubStreamFormat

Function	Set the stream format of sub stream		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setSubStreamFormat		
Param	format	0	H264
		1	MotionJpeg
Return	None		
Note	Our device can only support 2 streams:Main stream for PC access and Sub stream for mobile access, but someone need a MJ stream to embed their camera into a webpage, in this case, we should set sub stream format to Motion Jpeg, and then you can get MJ stream by command: /cgi-bin/CGIStream.cgi?cmd=GetMJStream, but when you login as a sub stream user, the stream data will be same as main stream.		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setSubStreamFormat&format=0&usr=admin&pwd=		

GetMJStream

Function	Get motion jpeg stream
privilege	visitor
Usage	/cgi-bin/CGIStream.cgi?cmd=GetMJStream
Param	None
Return	Motion jpeg stream data
Note	<p>1) Motion jpeg stream data is returned from http server by a serverpush mode</p> <p>2) MJ stream is VGA resolution @ 15fps</p> <p>3) For some version of Firefox browse, the Firefox will crash when use "GetMJStream" CGI to get mjstream long time. This problem is due to the browse has some defects, it can not parse data correctly and directly. In order to fix this problem, we should as follows:</p> <p>A. Create a .txt empty document, such as "MJ.txt".</p> <p>B.Input the content into you .txt document, as follows:</p> <pre><html> <body> </body></pre>

	</html> Note: please change the ip\port\usr\pwd to yourself; C. Rename your .txt to .html, such as “MJ.html”. D. Open you r.html by Firefox, and enjoy your MJStream-video;
Example	/cgi-bin/CGIStream.cgi?cmd=GetMJStream&usr=admin&pwd=

getOSDSetting

Function	Get OSD config	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getOSDSetting	
Param	None	
Return	isEnabledTimeStamp	Time stamp will display on screen or not
	isEnabledDevName	Camera name will display on screen or not
	dispPos	OSD display position, currently can only be 0
	isEnabledOSDMask	Is OSD mask effective
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getOSDSetting&usr=admin&pwd=	

setOSDSetting

Function	Set OSD config	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setOSDSetting	
Param	isEnabledTimeStamp	Time stamp will display on screen or not
	isEnabledDevName	Camera name will display on screen or not
	dispPos	OSD display position, currently can only be 0
	isEnabledOSDMask	Is OSD mask effective
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setOSDSetting&isEnabledTimeStamp=1&isEnabledDevName=1&dispPos=0&isEnabledOSDMask=0&usr=admin&pwd=	

getOsdMaskArea

Function	Get OSD mask area info
privilege	admin

Usage	/cgi-bin/CGIProxy.fcgi?cmd=getOsdMaskArea	
Param	None	
Return	x1_N	The top left X position of mask N
	y1_N	The top left Y position of mask N
	x2_N	The bottom right X position of mask N
	y2_N	The bottom right Y position of mask N
Note	Our device can only support 4 mask areas	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getOsdMaskArea&usr=admin&pwd=	

setOsdMaskArea

Function	Set OSD mask area info	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setOsdMaskArea	
param	x1_N	The top left X position of mask N
	y1_N	The top left Y position of mask N
	x2_N	The bottom right X position of mask N
	y2_N	The bottom right Y position of mask N
Resturn	None	
Note	Our device can only support 4 mask areas	
Example	/cgi-bin/CGIProxy.fcgi?cmd=setOsdMaskArea&x1_0=100&y1_0=100&x2_0=200&y2_0=200&x1_1=0&y1_1=0&x2_1=0&y2_1=0&x1_2=0&y1_2=0&x2_2=0&y2_2=0&x1_3=0&y1_3=0&x2_3=0&y2_3=0&usr=admin&pwd=	

getOSDMask

Function	Get OSD mask status	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getOSDMask	
Param	None	
Return	isEnableOSDMask	0-Disable, 1-Enable
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getOSDMask&usr=admin&pwd=	

setOSDMask

Function	Set OSD mask status
----------	---------------------

privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setOSDMask	
Param	isEnableOSDMask	0-Disable, 1-Enable
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setOSDMask&isEnableOSDMask=1&usr=admin&pwd=	

getMotionDetectConfig

Function	Get motion detect config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getMotionDetectConfig		
Param	None		
Return	isEnable	Is enable motion detect alarm	
	linkage	Motion alarm linkage (bit3 bit2 bit1 bit0)	bit0:Ring
			bit1:Send mail
			bit2:Snap picture
			bit3:Record
	snapInterval	The interval time to snap picture again	
	sensitivity	Motion detect sensitivity	0 : Low
			1: Normal
			2: High
			3: Lower
4: Lowest			
triggerInterval	The time of which motion detect alarm can trigger again when a motion detection has happened.		
scheduleN	The motion alarm schedule of one week, N = 0(Monday) ~6(Sunday) For detail, see *1 bellow		
areaN	The area info of row N For detail, see *2 bellow		
Note	<p>·Video region is divided into 10*10 sub areasideo region is divided into 10*10 sub areas</p> <p>·The min unit of schedule is half an hour, scheduleN value range $2^N - 1$ (N[0-48])</p> <p>·areaN value $2^N - 1$ (N[0-10])</p>		

Example	/cgi-bin/CGIProxy.fcgi?cmd=getMotionDetectConfig&usr=admin&pwd=
---------	-----------------------------------------------------------------

setMotionDetectConfig

Function	Set motion detect config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setMotionDetectConfig		
Param	isEnabled	Is enable motion detect alarm	
	linkage	Motion alarm linkage (bit3 bit2 bit1 bit0)	bit0:Ring
			bit1:Send mail
			bit2:Snap picture
			bit3:Record
	snapInterval	The interval time to snap picture again	
	sensitivity	Motion detect sensitivity	0 : Low
			1: Normal
			2: High
			3: Lower
4: Lowest			
triggerInterval	The time of which motion detect alarm can trigger again when a motion detection has happened.		
scheduleN	The motion alarm schedule of one week, N = 0(Monday) ~6(Sunday) For detail, see *1 bellow		
areaN	The area info of row N For detail, see *2 bellow		
Return	None		
Note	<p>·Video region is divided into 10*10 sub areasideo region is divided into 10*10 sub areas</p> <p>·The min unit of schedule is half an hour, scheduleN value range $2^N - 1$ (N[0-48])</p> <p>·areaN value $2^N - 1$ (N[0-10])</p>		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setMotionDetectConfig&isEnabled=1&linkage=16&snapInterval=2&sensitivity=1&triggerInterval=5&schedule0=1023&schedule1=1023&schedule2=1023&schedule3=1023&schedule4=1023&schedule5=1023&schedule6=1023&area0=1023&area1=1023&area2=1023&area3=1023&area4=1023&area5=1023&area6=1023&area7=1023&area7=1023&area8=1023&area9=1023&usr=admin&pwd=		

***1 schedule bitmap**

0	1	2	3	4	5	6	7	...	40	41	42	43	44	45	46	47	Monday
																	Tuesday
																	Wednesday
																	Thursday
																	Friday
																	Saturday
																	Sunday

Each grid of a row presents half of an hour of one day. For example, 40 presents 20:00 ~20:30.

The bit 40 set to “1” means the motion detection is effective between 20:00 to 20:30

***2 area bitmap**

bit0	bit1	bit2	bit3	bit4	bit5	bit6	bit7	bit8	bit9	area0
										area1
										area2
										area3
										area4
										area5
										area6
										area7
										area8
										area9

The video region is divided into 10*10 sub areas, bit0 above present the first area, when this bit is set to “1”, it means motion detection is effective on this area.

setLocalAlarmRecordConfig

Function	Set local alarm-record config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setLocalAlarmRecordConfig		
Param	isEnabledLocalAlarmRecord	0	Disable
		1	Enable
	localAlarmRecords	Recording time	
Return	None		
Note			

Example	/cgi-bin/CGIProxy.fcgi?cmd=setLocalAlarmRecordConfig&isEnabledLocalAlarmRecord=1&localAlarmRecordSecs=30&usr=admin&pwd=
---------	-------------------------------------------------------------------------------------------------------------------------

getLocalAlarmRecordConfig

Function	Get local alarm-record config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getLocalAlarmRecordConfig		
Param	None		
Return	isEnabledLocalAlarmRecord	0	Disable
		1	Enable
	localAlarmRecordSecs	Recording time	
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=getLocalAlarmRecordConfig&usr=admin&pwd=		

getSnapConfig

Function	Get snap config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getSnapConfig		
Param	None		
Return	snapPicQuality	0	Low quality
		1	Normal quality
		2	High quality
	saveLocation	0	Save to sd card
		1	Not in use now
		2	Upload to FTP
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=getSnapConfig&usr=admin&pwd=		

setSnapConfig

Function	Set snap config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setSnapConfig		
Param	snapPicQuality	0	Low quality

		1	Normal quality
		2	High quality
	saveLocation	0	Save to sd card
		1	Not in use now
		2	Upload to FTP
Return	None		
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=setSnapConfig&snapPicQuality=1&saveLocation=2&usr=admin&pwd=		

getScheduleSnapConfig

Function	Get schedule snap config	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getScheduleSnapConfig	
Param	None	
Return	isEnabled	Is enable motion detect alarm
	snapInterval	The interval time to snap picture again
	scheduleN	The motion alarm schedule of one week, N = 0(Monday) ~6(Sunday) For detail, see *1 bellow
Note	·The min unit of schedule is half an hour, scheduleN value range $2^N - 1$ (N[0-48])	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getScheduleSnapConfig&usr=admin&pwd=	

setScheduleSnapConfig

Function	Set schedule snap config	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setScheduleSnapConfig	
Param	isEnabled	Is enable snap
	snapInterval	The interval time to snap picture again
	scheduleN	The motion alarm schedule of one week, N = 0(Monday) ~6(Sunday) For detail, see *1 bellow
Return	None	
Note	·The min unit of schedule is half an hour, scheduleN value range	

	$2^N - 1$ (N[0-48])
Example	/cgi-bin/CGIProxy.fcgi?cmd=setScheduleSnapConfig&isEnabled=1&snapInterval=2&schedule0=1023&schedule1=1023&schedule2=1023&schedule3=1023&schedule4=1023&schedule5=1023&schedule6=1023&usr=admin&pwd=

***1 schedule bitmap**

0	1	2	3	4	5	6	7	...	40	41	42	43	44	45	46	47	Monday
																	Tuesday
																	Wednesday
																	Thursday
																	Friday
																	Saturday
																	Sunday

Each grid of a row presents half of an hour of one day. For example, 40 presents 20:00 ~20:30.

The bit 40 set to “1” means the snap is effective between 20:00 to 20:30

snapPicture

Function	Manual snap picture
privilege	visitor
Usage	/cgi-bin/CGIProxy.fcgi?cmd=snapPicture
Param	None
Return	We will return a html script directly: <code><html><body></body></html></code>
Note	Picture resolution is the same as main stream resolution
Example	/cgi-bin/CGIProxy.fcgi?cmd=snapPicture&usr=admin&pwd=

snapPicture2

Function	Manual snap picture
privilege	visitor
Usage	/cgi-bin/CGIProxy.fcgi?cmd=snapPicture2
Param	None
Return	Jpeg image data
Note	This command will return jpeg image data directly

Example	/cgi-bin/CGIProxy.fcgi?cmd=snapPicture2&usr=admin&pwd=
---------	--------------------------------------------------------

getRecordList

Function	Get record list	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getRecordList	
Param	recordPath	Record path
	startTime	Start time for research
	endTime	End time for research
	recordType	Recort type
	startNo	Start no
Return	totalCnt	Total record count
	curCnt	Current record count
	recordN	N(0-9), Record information
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getRecordList&usr=admin&pwd=	

getRecordList2

Function	Get record list	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getRecordList2	
Param	recordPath	Record path
	startTime	Start time for research
	endTime	End time for research
	recordType	Recort type
	startNo	Start no
Return	totalCnt	Total record count
	curCnt	Current record count
	recordN	N(0-9), Record information
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getRecordList2&usr=admin&pwd=	

reloadRecordindex

Function	Synchronization of record index for Play
----------	------------------------------------------

privilege	admin
Usage	/cgi-bin/CGIProxy.fcgi?cmd=reloadRecordindex
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=reloadRecordindex&usr=admin&pwd=

getAlarmRecordConfig

Function	Get alarm record config	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getAlarmRecordConfig	
Param	None	
Return	isEnabledPreRecord	Preview record state
	preRecordSecs	Preview record time
	alarmRecordSecs	Alarm record time
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getAlarmRecordConfig&usr=admin&pwd=	

setAlarmRecordConfig

Function	Set alarm record config	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setAlarmRecordConfig	
Param	isEnabledPreRecord	Preview record state
	preRecordSecs	Preview record time
	alarmRecordSecs	Alarm record time
Return	Set result(0-success,-1-error)	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setAlarmRecordConfig&usr=admin&pwd=&isEnabledPreRecord=1&preRecordSecs=5&alarmRecordSecs=30	

getRecordPath

Function	Get record path for storage	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getRecordPath	
Param	None	
Return	path	0-SD card, 2-FTP server
	free	The free capacity of storage device
	total	The total capacity of storage device
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getRecordPath&usr=admin&pwd=	

getScheduleRecordConfig


Function	Get config for schedule recording	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getScheduleRecordConfig	
Param	None	
Return	isEnabled	Schedule-Record enable status, 0-disable, 1-enable
	recordLevel	Level for drop frame, 0-30/30, 1-24/30, 2-15/30, 3-8/30, 4-4/30, 5-1/30;
	spaceFullMode	The process method when SD card is full, 0-cover the oldest video and continue record, 1-stop record
	isEnabledAudio	Is recording include audio? 0-no, 1-yes
	scheduleN	The motion alarm schedule of one week, N = 0(Monday) ~6(Sunday) For detail, see *1 bellow
Note	·The min unit of schedule is half an hour, scheduleN value range $2^N - 1$ (N[0-48])	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getScheduleRecordConfig&usr=admin&pwd=	

setScheduleRecordConfig

Function	Set schedule recordconfig	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setScheduleRecordConfig	
Param	isEnabled	Schedule-Record enable status, 0-disable, 1-enable

	recordLevel	Level for drop frame,0-30/30,1-24/30,2-15/30,3-8/30,4-4/30,5-1/30;
	spaceFullMode	The process method when SD card is full,0-cover the oldest video and continue record,1-stop record
	isEnabledAudio	Is recording include audio? 0-no,1-yes
	scheduleN	The motion alarm schedule of one week, N = 0(Monday) ~6(Sunday) For detail, see *1 bellow
Return	None	
Note	·The min unit of schedule is half an hour, scheduleN value range $2^N - 1$ (N[0-48])	
Example	/cgi-bin/CGIProxy.fcgi?cmd=setScheduleRecordConfig&isEnabled=1&recordLevel=0&spaceFullMode=0&isEnabledAudio=0&schedule0=1023&schedule1=1023&schedule2=1023&schedule3=1023&schedule4=1023&schedule5=1023&schedule6=1023&usr=admin&pwd=	

*1 schedule bitmap

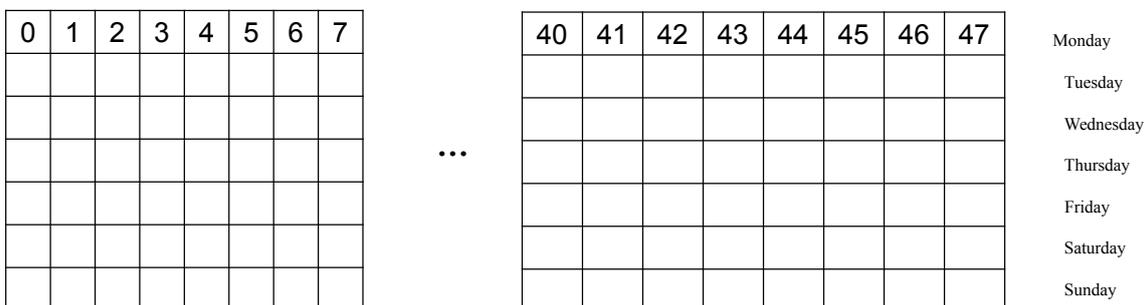

Each grid of a row presents half of an hour of one day. For example, 40 presents 20:00 ~20:30.

The bit 40 set to “1” means the snap is effective between 20:00 to 20:30

setIOAlarmConfig

Function	Set IO alarm config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setIOAlarmConfig		
Param	isEnabled	Enable state	
	linkage	IO alarm linkage	bit0:Ring
			bit1:Send mail

			bit2:Snap picture
			bit3:Record
	alarmLevel	Alarm level,0-Low,1-high,trigger alarm	
	snapInterval	Interval for snap picture	
	triggerInterval	Interval for trigger alarm again	
	scheduleN	N(0-6), alarm schedule	
Return	Set result(0-success,-1-error)		
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=setIOAlarmConfig&usr=admin&pwd=&isEnabled=1&linkage=16&snapInterval=2&alarmLevel=1&triggerInterval=5&schedule0=1024&schedule1=1024&schedule2=1024&schedule3=1024&schedule4=1024&schedule5=1024&schedule6=1024		

getIOAlarmConfig

Function	Get IO alarm config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getIOAlarmConfig		
Param	None		
Return	isEnabled	Enable state	
	linkage	IO alarm linkage	bit0:Ring
			bit1:Send mail
			bit2:Snap picture
			bit3:Record
	alarmLevel	Alarm level	
	snapInterval	Interval for snap picture	
	triggerInterval	Interval for trigger alarm again	
scheduleN	N(0-6), alarm schedule		
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=getIOAlarmConfig&usr=admin&pwd=		

clearIOAlarmOutput

Function	Clean IO alarm output
privilege	admin
Usage	/cgi-bin/CGIProxy.fcgi?cmd=clearIOAlarmOutput

Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=clearIOAlarmOutput&usr=admin&pwd=

setPCAudioAlarmCfg

Function	Set audio alarm config for PC (web live video)	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setPCAudioAlarmCfg	
Param	isEnablePCAudioAlarm	Enable state
Return	Set result(0-success,-1-error)	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setPCAudioAlarmCfg&usr=admin&pwd=&isEnablePCAudioAlarm=1	

getPCAudioAlarmCfg

Function	Get audio alarm config for PC (web live video)	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getPCAudioAlarmCfg	
Param	None	
Return	isEnablePCAudioAlarm	Enable state
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getPCAudioAlarmCfg&usr=admin&pwd=	

getMultiDevList

Function	Get multi device list	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getMultiDevList	
Param	None	
Return	devN	N(0-8), device information
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getMultiDevList&usr=admin&pwd=	

getMultiDevDetailInfo

Function	Get multi device information	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getMultiDevDetailInfo	
Param	chnnl	Channel no
Return	productType	Device type
	ip	Device IP
	port	Web port
	mediaPort	Media port
	userName	User name
	passWord	Password
	devName	Device name
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getMultiDevDetailInfo&usr=admin&pwd=	

addMultiDev

Function	Add multiy device	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=addMultiDev	
Param	chnnl	Channel no
	productType	Device type
	ip	Device Ip
	port	Web port
	mediaPort	Media port
	userName	User name
	passWord	Password
	devName	Device name
Return	Add result(0-success,-1-error)	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=addMultiDev&usr=admin&pwd=&chnnl=2&productType=H264&ip=192.168.1.3&port=88&mediaPort=88&userName=admin&passWord=&devName=FI9805W	

delMultiDev

Function	Delete multiy device	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=delMultiDev	
Param	chnnl	Channel no
Return	Delete result(0-success,-1-error)	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=delMultiDev&usr=admin&pwd=&chnnl=2	

User account

addAccount

Function	Add user account		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=addAccount		
Param	usrName	user name	
	usrPwd	user password	
	privilege	0	Visitor
		1	Operator
2		Administrator	
Return	None		
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=addAccount&usrName=test&usrPwd=test&privilege=0&usr=admin&pwd=		

delAccount

Function	Delete user account	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=delAccount	
Param	usrName	user name

Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=delAccount&usrName=test&usr=admin&pwd=

changePassword

Function	Change password	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=changePassword	
Param	usrName	The user you want to change password
	oldPwd	old password
	newPwd	new password
Return	None	
Note	Admin can change every user's password, visitor and operator can only change their own password	
Example	/cgi-bin/CGIProxy.fcgi?cmd=changePassword&usrName=admin&oldPwd=&newPwd=test&usr=admin&pwd=	

changeUserName

Function	Change user name	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=changeUserName	
Param	usrName	The user you want to change name
	newUserName	The new user name
Return	None	
Note	Admin can change every user's name, visitor and operator can only change their own name	
Example	/cgi-bin/CGIProxy.fcgi?cmd=changeUserName&usrName=admin&newUserName=newname&usr=admin&pwd=	

changeUserNameAndPwdTogether

Function	Change user name and password together	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=changeUserNameAndPwdTogether	

Param	usrName	The user you want to change name
	newUsrName	New user name
	oldPwd	old password
	newPwd	new password
Return	None	
Note	Admin can change every user's name, visitor and operator can only change their own name	
Example	/cgi-bin/CGIProxy.fcgi?cmd=changeUserNameAndPwdTogether&usrName=admin&newUsrName=newname&oldPwd=&newPwd=newpwd&usr=admin&pwd=	

logIn

Function	User log in to camera		
privilege	visitor		
Usage	/cgi-bin/CGIProxy.fcgi?cmd= logIn		
Param	usrName	User name	
	remoteIp	Access IP	
	groupid	An id use to distinguish different users,can be set to current cpu tick	
	pwd	password	
Return	logInResult	0	Login success
		-1	Parameter check error
		-2	Exceed max user
		-4	User not exist
		-5	Password
		-6	Password error
		-7	Access deny
		-8	Already login
	privilege	0	Visitor
		1	Operator
2		Administrator	
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=logIn&usrName=admin&remoteIp=192.168.1.12&groupId=673982479&pwd=&usr=admin&pwd=		

logOut

Function	User log out to camera	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=logOut	
Param	usrName	User name
	ip	Access IP
	groupid	An id use to distinguish different users,can be set to current cpu tick
Return	logOutResult	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=logOut&usrName=admin&ip=192.168.1.12&groupI d=673982479&usr=admin&pwd=	

getSessionList

Function	Get current session list of the camera	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getSessionList	
Param	None	
Return	usrCnt	session count
	usrN	User name of session N
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getSessionList&usr=admin&pwd=	

getUserList

Function	Get user account list of the camera	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getUserList	
Param	None	
Return	usrCnt	User count
	usrN	User name of accnount N
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getUserList&usr=admin&pwd=	

usrBeatHeart

Function	user checks connection with camera	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=usrBeatHeart	
Param	usrName	User name
	remotelp	Access IP
	groupId	An id use to distinguish different users,can be set to current cpu tick
Return	checkResult(0-success,-1-error)	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=usrBeatHeart&usrName=admin&ip=192.168.1.13 &groupId=673982479&usr=admin&pwd=	

PTZ Control

ptzMoveUp

Function	Move up
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveUp
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveUp&usr=admin&pwd=

ptzMoveDown

Function	Move down
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveDown
Param	None
Return	None
Note	

Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveDown&usr=admin&pwd=
---------	-------------------------------------------------------

ptzMoveLeft

Function	Move to left
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveLeft
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveLeft&usr=admin&pwd=

ptzMoveRight

Function	Move to right
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveRight
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveRight&usr=admin&pwd=

ptzMoveTopLeft

Function	Move to top left
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveTopLeft
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveTopLeft&usr=admin&pwd=

ptzMoveTopRight

Function	Move to top right
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveTopRight

Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveTopRight&usr=admin&pwd=

ptzMoveBottomLeft

Function	Move to bottom left
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveBottomLeft
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveBottomLeft&usr=admin&pwd=

ptzMoveBottomRight

Function	Move to bottom right
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveBottomRight
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzMoveBottomRight&usr=admin&pwd=

ptzStopRun

Function	Stop run PT
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzStopRun
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzStopRun&usr=admin&pwd=

ptzReset

Function	Reset PT to default position
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzReset
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzReset&usr=admin&pwd=

getPTZSpeed

Function	Get the speed of PT		
privilege	operator		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getPTZSpeed		
Param	None		
Return	speed	0	Very slow
		1	Slow
		2	Normal speed
		3	Fast
		4	Very fast
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=getPTZSpeed&usr=admin&pwd=		

setPTZSpeed

Function	Set the speed of PT		
privilege	operator		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setPTZSpeed		
Param	speed	0	Very slow
		1	Slow
		2	Normal speed
		3	Fast
		4	Very fast
Return	None		
Note			

Example	/cgi-bin/CGIProxy.fcgi?cmd=setPTZSpeed&speed=2&usr=admin&pwd=
---------	---------------------------------------------------------------

getPTZPresetPointList

Function	Get all preset point	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getPTZPresetPointList	
Param	None	
Return	cnt	Current preset point count
	pointN	The name of point N
Note	Our device can support at most 16 preset point We have 4 point default: LeftMost\RightMost\TopMost\BottomMost	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getPTZPresetPointList&usr=admin&pwd=	

ptzAddPresetPoint

Function	Add preset point	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzAddPresetPoint	
Param	name	Preset point name
Return	None	
Note	The preset point position is current PT position	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzAddPresetPoint&name=test&usr=admin&pwd= =	

ptzDeletePresetPoint

Function	Delete preset point by name	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzDeletePresetPoint	
Param	name	Preset point name
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzDeletePresetPoint&name=test&usr=admin&pwd= wd=	

ptzGotoPresetPoint

Function	Goto preset position	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzGotoPresetPoint	
Param	name	Preset point name
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzGotoPresetPoint&name=test&usr=admin&pwd= =	

ptzGetCruiseMapList

Function	Get all cruise map list	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzGetCruiseMapList	
Param	None	
Return	cnt	Current cruise map point count
	mapN	The name of map N
Note	Our device can support at most 8 cruise map We have 2 maps default:Horizontal/Vertical	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzGetCruiseMapList&usr=admin&pwd=	

ptzGetCruiseMapInfo

Function	Get the detail info of a cruise map by name		
privilege	operator		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzGetCruiseMapInfo		
Param	name	Name of the cruise map	
Return	getResult	0	Success
		-1	Fail
	pointN	The preset point name of this cruise map	
Note	Our device can support at most 8 preset point one cruise map		
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzGetCruiseMapInfo&name=Horizontal&usr=admin&pwd=		

ptzSetCruiseMap

Function	Add a cruise map	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzSetCruiseMap	
Param	name	Name of the cruise map
	pointN	The name of preset point N
Return	None	
Note	Our device can support at most 8 preset point one cruise map	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzSetCruiseMap&name=test&point0=test0&point1=test1&point2=test2&point3=test3&point4=test4&point5=test5&point6=&point7=&usr=admin&pwd=	

ptzDelCruiseMap

Function	Delete a cruise map	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzDelCruiseMap	
Param	name	Name of the cruise map
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzDelCruiseMap&name=test&usr=admin&pwd=	

ptzStartCruise

Function	Start a specificate cruise	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzStartCruise	
Param	mapName	Name of the cruise map
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzStartCruise&mapName=test&usr=admin&pwd=	

ptzStopCruise

Function	Start current cruise
privilege	operator

Usage	/cgi-bin/CGIProxy.fcgi?cmd=ptzStopCruise
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=ptzStopCruise&usr=admin&pwd=

setCruiseTime

Function	Set time for continue cruise	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setCruiseTime	
Param	time	Time for continue cruise
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setCruiseTime&time=5&usr=admin&pwd=	

getCruiseTime

Function	Set time for continue cruise	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getCuriseTime	
Param		
Return	time	Time for continue cruise
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getCuriseTime&usr=admin&pwd=	

setCruiseTimeCustomed

Function	Set time for continue cruise by costomer	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setCruiseTimeCustomed	
Param	time	Customed time for continue cruise
	customed	Customed enable state-0-no,1-yes
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setCruiseTimeCustomed&time=5&customed=1&usr=admin&pwd=	

getCruiseTimeCustomed

Function	Set time for continue cruise by costomer	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getCuriseTimeCustomed	
Param		
Return	time	Customed time for continue cruise
	customed	Customed enable state-0-no,1-yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getCuriseTimeCustomed&usr=admin&pwd=	

setCruiseLoopCnt

Function	Set counts for continue cruise	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setCruiseLoopCnt	
Param	count	Counts for continue cruise
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setCruiseLoopCnt&count=5&usr=admin&pwd=	

getCruiseLoopCnt

Function	Set counts for continue cruise	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getCruiseLoopCnt	
Param		
Return	count	Counts for continue cruise
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getCruiseLoopCnt&usr=admin&pwd=	

setCruiseCtrlMode

Function	Set control mode for continue cruise, by time or count	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setCruiseCtrlMode	

Param	mode	Control mode-0:by time,1:by loop count
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setCruiseCtrlMode&mode=0&usr=admin&pwd=	

getCruiseCtrlMode

Function	Get control mode for continue cruise, by time or count	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getCruiseCtrlMode	
Param		
Return	mode	Control mode-0:by time,1:by loop count
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getCruiseCtrlMode&usr=admin&pwd=	

setCruisePrePointLingerTime

Function	Set linger time for cruise,when pt arrive prepoint	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setCruisePrepointLingerTime	
Param	name	Cruise map name
	timeN	Time for each prepoint
Return	None	
Note	N:[0-7],max number of prepoints in cruise	
Example	/cgi-bin/CGIProxy.fcgi?cmd=setCruisePrePointLingerTime&name=123&time0=0&time1=1&time2=2&time3=3&time4=4&time5=5&time6=6&time7=7&usr=admin&pwd=	

getCruisePrePointLingerTime

Function	Set linger time for cruise,when pt arrive prepoint	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getCruisePrepointLingerTime	
Param	name	Cruise map name
Return	timeN	Time for each prepoint
Note	N:[0-7],max number of prepoints in cruise	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getCruisePrePointLingerTime&name=123&usr=a	

	dmin&pwd=
--	-----------

zoomIn

Function	Zoom in
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=zoomIn
Param	None
Return	None
Note	Only supported by the device has zoom lens
Example	/cgi-bin/CGIProxy.fcgi?cmd=zoomIn&usr=admin&pwd=

zoomOut

Function	Zoom out
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=zoomOut
Param	None
Return	None
Note	Only supported by the device has zoom lens
Example	/cgi-bin/CGIProxy.fcgi?cmd=zoomOut&usr=admin&pwd=

zoomStop

Function	Stop zoom run
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=zoomStop
Param	None
Return	None
Note	Only supported by the device has zoom lens
Example	/cgi-bin/CGIProxy.fcgi?cmd=zoomStop&usr=admin&pwd=

getZoomSpeed

Function	Get the speed of Zoom
privilege	operator
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getZoomSpeed

Param	None		
Return	speed	0	Slow
		1	Normal
		2	Fast
Note	Only supported by the device has zoom lens		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getZoomSpeed&usr=admin&pwd=		

setZoomSpeed

Function	Set the speed of PTZ		
privilege	operator		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setZoomSpeed		
Param	speed	0	Slow
		1	Normal
		2	Fast
Return	None		
Note	Only supported by the device has zoom lens		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setZoomSpeed&usr=admin&pwd=&speed=1		

setPTZSelfTestMode

Function	Set the selftest mode of PTZ		
privilege	operator		
Usage	/cgi-bin/CGIProxy.fcgi?cmd= setPTZSelfTestMode		
Param	mode	0	No selftest
		1	Normal selftest
		2	After normal selftest, then goto presetpoint-appointed
Return	None		
Note	Only supported by ipc that can enable ptz-selftest		
Example	/cgi-bin/CGIProxy.fcgi?usr=admin&pwd=&cmd=setPTZSelfTestMode&mode=2		

getPTZSelfTestMode

Function	Get the selftest mode of PTZ		
privilege	operator		

Usage	/cgi-bin/CGIProxy.fcgi?cmd= getPTZSelfTestMode		
Param	None		
Return	mode	0	No selftest
		1	Normal selftest
		2	After normal selftest, then goto presetpoint-appointed
Return	None		
Note	Only supported by ipc that can enable ptz-selftest		
Example	/cgi-bin/CGIProxy.fcgi?usr=admin&pwd=&cmd=getPTZSelfTestMode		

setPTZPrePointForSelfTest

Function	Set presetpoint for selftest of PTZ	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd= setPTZPrePointForSelfTest	
Param	name	Preset point name
Return	None	
Note	Only supported by ipc that can enable ptz-selftest-2	
Example	/cgi-bin/CGIProxy.fcgi?usr=admin&pwd=&cmd=setPTZPrePointForSelfTest&name=TopMost	

getPTZPrePointForSelfTest

Function	Get the presetpoint for selftest of PTZ	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd= getPTZPrePointForSelfTest	
Param	None	
Return	name	Preset point name
Note	Only supported by ipc that can enable ptz-selftest	
Example	/cgi-bin/CGIProxy.fcgi?usr=admin&pwd=&cmd=getPTZPrePointForSelfTest	

set485Info

Function	Set informations of 485	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=set485Info	

Param	rs485Protocol	Protocol
	rs485Addr	Address
	rs485Baud	Baud rate
	rs485DataBit	DataBit
	rs485StopBit	StopBit
	rs485Check	Parity
Return	None	
Note	Only supported by ipc that can enable 485	
Example	/cgi-bin/CGIProxy.fcgi?usr=admin&pwd=&cmd=set485Info&rs485Protocol=0&rs485Addr=1&rs485Baud=1200&rs485DataBit=7&rs485StopBit=1&rs485Check=0	

get485Info

Function	Get informations of 485	
privilege	operator	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=get485Info	
Param	None	
Return	rs485Protocol	Protocol
	rs485Addr	Address
	rs485Baud	Baud rate
	rs485DataBit	DataBit
	rs485StopBit	StopBit
	rs485Check	Parity
Note	Only supported by ipc that can enable 485	
Example	/cgi-bin/CGIProxy.fcgi?usr=admin&pwd=&cmd=get485Info	

Network

getIPInfo

Function	Get IP Info	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getIPInfo	
Param	None	
Return	isDHCP	Obtain ip from dhcp server or not

	ip	ip address(Can only support ipv4 yet)
	gate	gateway("0.0.0.0" when use dhcp)
	mask	subnet mask
	dns1	The first dns server addr("0.0.0.0" when use dhcp)
	dns2	The second dns server addr("0.0.0.0" when use dhcp)
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getIPInfo&usr=admin&pwd=	

setIpInfo

Function	Set IP Info	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setIpInfo	
Param	isDHCP	Obtain ip from dhcp server or not
	ip	ip address(Can only support ipv4 yet)
	gate	gateway
	mask	subnet mask
	dns1	The first dns server addr
	dns2	The second dns server addr
Return	None	
Note	System will reboot automatically to take effect after call this CGI command	
Example	/cgi-bin/CGIProxy.fcgi?cmd=setIpInfo&isDHCP=0&ip=192.168.1.88&gate=192.168.1.1&mask=255.255.255.0&dns1=192.168.1.1&dns2=192.168.1.1&usr=admin&pwd=	

refreshWifiList

Function	Start scan the aps around	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=refreshWifiList	
Param	None	
Return	None	
Note	This operation may takes a while, about 20 seconds or above, the other operation on this device will be blocked during the period.	
Example	/cgi-bin/CGIProxy.fcgi?cmd=refreshWifiList&usr=admin&pwd=	

getWifiList

Function	Get the aps around after refreshWifiList				
privilege	admin				
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getWifiList				
Param	startNo	The start NO of the ap list you want to get. For example:There are 30 aps around you, you want to look at the last ten aps, then startNo=20			
Return	totalCnt	Total count of aps			
	curCnt	Current aps count			
	apN	The detail info of ap N Format: ssid+mac+quality+isEncrypt+encryptType	ssid	AP name	
			mac	AP's mac address	
			quality	Signal quality(0~100)	
			isEncrypt	Encrypt or not	
			encryptType	0	Open mode
1	WEP				
2	WPA				
3	WPA2				
		4	WPA/WPA2		
Note	Only 10 aps will be returned one time				
Example	/cgi-bin/CGIProxy.fcgi?cmd=getWifiList&startNo=0&usr=admin&pwd=				

setWifiSetting

Function	Set wifi config			
privilege	admin			
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setWifiSetting			
Param	isEnabled	Enable state		
	isUseWifi	Use wifi or not		
	ssid	AP name		
	netType	0	Infra net	
		1	Ad-hoc Not supported yet	
	encryptType	0	Open mode	
		1	WEP	
		2	WPA	
		3	WPA2	
			4	WPA/WPA2

	psk	The psk of WPA WPA2	
	authMode	0	Open mode
		1	Shared key
		2	Auto mode
	keyFormat	0	ASIC
		1	Hex
	defaultKey	1~4	
	key1		
	key2		
	key3		
	key4		
	key1Len	64 or 128	
	key2Len	64 or 128	
	key3Len	64 or 128	
	key4Len	64 or 128	
Return	None		
Note	Camera will not connect to AP unless you enject your cable		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setWifiSetting&isEnabled=1&isUseWifi=1&ssid=fostar_soft&netType=0&encryptType=4&psk=software&authMode=0&keyFormat=0&defaultKey=1&key1=&key2=&key3=&key4=&key1Len=64&key2Len=64&key3Len=64&key4Len=64&usr=admin&pwd=		

getWifiConfig

Function	Get wifi config			
privilege	admin			
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getWifiConfig			
Param	None			
Return	isEnabled	Enable state		
	isUseWifi	Use wifi or not		
	isConnected	Connected state		
	connectedAp	Connected ap		
	ssid	AP name		
	encryptType	0	Open mode	
		1	WEP	

		2	WPA
		3	WPA2
		4	WPA/WPA2
	psk	The psk of WPA WPA2	
	authMode	0	Open mode
		1	Shared key
		2	Auto mode
	keyFormat	0	ASIC
		1	Hex
	defaultKey	1~4	
	key1		
	key2		
	key3		
	key4		
	key1Len	64 or 128	
	key2Len	64 or 128	
	key3Len	64 or 128	
	key4Len	64 or 128	
Return	None		
Note	Camera will not connect to AP unless you eject your cable		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getWifiConfig&usr=admin&pwd=		

getPortInfo

Function	Get ports of camera	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getPortInfo	
Param	None	
Return	webPort	http port(default value is 88)
	httpsPort	https port(default value is 443)
	mediaPort	media port(default value is 88)
	onvifPort	Onvif Port(default value is 888)
Note	<p>.You can call this CGI command without usr or pwd section</p> <p>.onvifPort param only for onvif camera, the camra which does not has onvif function does not have this param</p>	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getPortInfo&usr=admin&pwd=	

setPortInfo

Function	Set ports of camera	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getPortInfo	
Param	webPort	http port(default value is 88)
	mediaPort	media port(default value is 88)
	httpsPort	https port(default value is 443)
	onvifPort	Onvif Port(default value is 888)
Return	None	
Note	.Re login is needed after call this CGI command .onvifPort param only for onvif camera, the camra which does not has onvif function does not have this param	
Example	/cgi-bin/CGIProxy.fcgi?cmd=setPortInfo&webPort=88&mediaPort=88&httpsPort=443&onvifPort=888&usr=admin&pwd=	

getUPnPConfig

Function	Get UpnP config	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getUPnPConfig	
Param	None	
Return	isEnabled	is Enable UpnP function
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getUPnPConfig&usr=admin&pwd=	

setUPnPConfig

Function	Set UpnP config	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setUPnPConfig	
Param	isEnabled	is Enable UpnP function
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setUPnPConfig&isEnabled=1&usr=admin&pwd=	

getDDNSConfig

Function	Get DDNS config			
privilege	admin			
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getDDNSConfig			
Param	None			
Return	isEnabled	is Enable DDNS update		
	hostName	DDNS domain		
	ddnsServer	0	Factory DDNS	
		1	Oray	
		2	3322	
		3	no-ip	
		4	dyndns	
	user	user name		
password	password			
factoryDDNS	factory ddns			
Note				
Example	/cgi-bin/CGIProxy.fcgi?cmd=getDDNSConfig&usr=admin&pwd=			

setDDNSConfig

Function	Set DDNS config			
privilege	admin			
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setDDNSConfig			
Param	isEnabled	is Enable DDNS update		
	hostName	DDNS domain		
	ddnsServer	0	Factory DDNS	
		1	Oray	
		2	3322	
		3	no-ip	
		4	dyndns	
	user	user name		
password	password			
Return	None			
Note	This command can only be used to set the third party ddns			
Example	/cgi-bin/CGIProxy.fcgi?cmd=setDDNSConfig&isEnabled=1&hostName=test.dyn dns.org&ddnsServer=4&user=test&password=test&usr=admin&pwd=			

setFtpConfig

Function	Set FTP config			
privilege	admin			
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setFtpConfig			
Param	ftpAddr	FTP server address, you can contain sub directory in it		
	ftpPort	FTP port		
	mode	0	PASV mode	
		1	PORT mode	
	userName	user name		
password	password			
Return	None			
Note				
Example	/cgi-bin/CGIProxy.fcgi?cmd=setFtpConfig&ftpAddr=ftp://192.168.1.2/sbuDir&ftpPort=21&mode=0&userName=test&password=test&usr=admin&pwd=			

getFtpConfig

Function	Get FTP config			
privilege	admin			
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getFtpConfig			
Param	None			
Param	ftpAddr	FTP server address, you can contain sub directory in it		
	ftpPort	FTP port		
	mode	0	PASV mode	
		1	PORT mode	
	userName	user name		
password	password			
Note				
Example	/cgi-bin/CGIProxy.fcgi?cmd=getFtpConfig&usr=admin&pwd=			

testFtpServer

Function	Test FTP server		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=testFtpServer		
Param	ftpAddr	FTP server address, you can contain sub directory in it	

	ftpPort	FTP port	
	mode	0	PASV mode
		1	PORT mode
	userName	user name	
	password	password	
Return	testResult	0	Success
		-1	Fail
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=testFtpServer&ftpAddr=ftp://192.168.1.2/sbuDir&ftpPort=21&mode=0&userName=test&password=test&usr=admin&pwd=		

getSMTPConfig

Function	Get mail config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getSMTPConfig		
Param	None		
Return	isEnabled	is enable camera send mail?	
	server	SMTP server address	
	port	smtp port	
	isNeedAuth	Need auth user account or not	
	tls	0	None
		1	TLS
		2	STARTTLS
	user	user name	
	password	password	
	sender		
reciever	Use “,” between 2 senders, for exapler: aaa@123.com,bbb@456.com		
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=getSMTPConfig&usr=admin&pwd=		

setSMTPConfig

Function	Get mail config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setSMTPConfig		

Param	isEnabled	is enable camera send mail?	
	server	SMTP server address	
	port	smtp port	
	isNeedAuth	Need auth user account or not	
	tls	0	None
		1	TLS
		2	STARTTLS
	user	user name	
	password	password	
	sender		
reciever	Use “,” between 2 senders, for exapler: aaa@123.com,bbb@456.com		
Return	None		
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=setSMTPConfig&isEnabled=1&server=smtp.gmail.com&port=587&isNeedAuth=1&user=test&password=test&send=test@gmail.com&reciever=aa@123.com,bb@456.com&usr=admin&pwd=		

smtpTest

Function	Test mail setting		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=smtpTest		
Param	smtpServer	SMTP server address	
	port	smtp port	
	isNeedAuth	Need auth user account or not	
	tls	0	None
		1	TLS
		2	STARTTLS
	user	user name	
	password	password	
sender	Send Email address		
Return	testResult	0	Success
		-1	Fail
Note	You must call setSMTPConfig firstly. We will send a test mail to all recievers		
Example	/cgi-bin/CGIProxy.fcgi?cmd=smtpTest&smtpServer=smtp.gmail.com&port=587		

	&isNeedAuth=1&user=test&password=test&sender=test@gmail.com&usr=admin&pwd=
--	----------------------------------------------------------------------------

setP2PEnable

Function	Set p2p status		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setP2PEnable		
	enable	0	Disable
		1	Enable
Return	None		
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=setP2PEnable&enable=1&usr=admin&pwd=		

getP2PEnable

Function	Get p2p status		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getP2PEnable		
Param	None		
	enable	0	Disable
		1	Enable
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=getP2PEnable&usr=admin&pwd=		

setP2PPort

Function	Set p2p port	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setP2PPort	
	port	P2P port number
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setP2PPort&port=12345&usr=admin&pwd=	

getP2PPort

Function	Get p2p port	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getP2PPort	
Param	None	
Return	port	P2P port number
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getP2PPort&usr=admin&pwd=	

getP2PInfo

Function	Get p2p UID	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getP2PInfo	
Param	None	
Return	uid	P2P UID
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getP2PInfo&usr=admin&pwd=	

getPPPoEConfig

Function	Get PPPoE config	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getPPPoEConfig	
Param	None	
Return	isEnabled	is Enable PPPoE function
	userName	userName
	password	password
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getPPPoEConfig&usr=admin&pwd=	

setPPPoEConfig

Function	Set PPPoE config
privilege	admin

	sec	
Return	None	
Note	This command can only be used to set the third party ddns	
Example	/cgi-bin/CGIProxy.fcgi?cmd=setSystemTime&timeSource=1&ntpServer=&dateFormat=0&timeFormat=0&timeZone=0&isDst=0&dst=0&year=2012&mon=1&day=6&hour=9&minute=35&sec=0&usr=admin&pwd=	

getSystemTime

Function	Get system time		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getSystemTime		
Param	None		
Return	timeSource	0	Get time from NTP server
		1	Set time manually
	ntpServer	ntp server addr Support ntp server: time.nist.gov time.kriss.re.kr time.windows.com time.nuri.net	
	dateFormat	0	YYYY-MM-DD
		1	DD/MM/YYYY
		2	MM/DD/YYYY
	timeFormat	0	12 hours
		1	24 hours
	timeZone	The seconds between local time and GMT time. For example: <code>timeZone=3600</code> presents GMT-01:00 <code>timeZone=-3600</code> presents GMT+01:00	
	isDst	Daylight saving time (0-disable,1-enable)	
	dst	Not in use currently	
	year		
	month		
	day		
	hour		
min			
sec			
Note	This command can only be used to set the third party ddns		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getSystemTime&usr=admin&pwd=		

openInfraLed

Function	Force open infra led		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=openInfraLed		
Param	None		
Return	ctrlResult	0	Success
		-1	Fail
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=openInfraLed&usr=admin&pwd=		

closeInfraLed

Function	Force close infra led		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=closeInfraLed		
Param	None		
Return	ctrlResult	0	Success
		-1	Fail
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=closeInfraLed&usr=admin&pwd=		

getInfraLedConfig

Function	Get infra led config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getInfraLedConfig		
Param	None		
Return	mode	0	Auto mode
		1	Manual mode
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=getInfraLedConfig&usr=admin&pwd=		

setInfraLedConfig

Function	Set infra led config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setInfraLedConfig&mode=0		
Param	mode	0	Auto mode
		1	Manual mode
Return	None		
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=setInfraLedConfig&mode=&usr=admin&pwd=		

getScheduleInfraLedConfig

Function	Get config for infra led switch schedule		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getScheduleInfraLedConfig		
Param	None		
Return	startHourN	Start hour	
	startMinN	Start Minitue	
	endHourN	End hour	
	endMinN	End minutue	
Note	N:[0-2],the number of infra led switch schedule		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getScheduleInfraLedConfig&usr=admin&pwd=		

setScheduleInfraLedConfig

Function	Set config for infra led switch schedule		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setScheduleInfraLedConfig&mode=0		
Param	startHourN	Start hour	
	startMinN	Start Minitue	
	endHourN	End hour	
	endMinN	End minutue	
Return	None		
Note	N:[0-2],the number of infra led switch schedule		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setInfraLedConfig&mode=&usr=admin&pwd=		

getDevState

Function	Get all device state		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getDevState		
Param	None		
Return	IOAlarm	0	Disabled
		1	No alarm
		2	Detect alarm
	motionDetectAlarm	0	Disabled
		1	No alarm
		2	Detect alarm
	soundAlarm	0	Disabled
		1	No alarm
		2	Detect alarm
	record	0	Not in recording
		1	Recording
	sdState	0	No sd card
		1	Sd card ok
		2	Sd card read only
	sdFreeSpace	Free space of sd card by unit of k	
	sdTotalSpace	Total space of sd card by unit of k	
	ntpState	0	Disabled
		1	Update success
		2	Update fail
	ddnspState	0	Disabled
		1	Update success
		2	Update fail
	url	DDNS url	
	upnpState	0	Disabled
		1	Update success
		2	Update fail
	isWifiConnected	0	No wifi connected
		1	Connected
	wifiConnectedAP	The ssid of the ap which has been connected	
	infraLedState	0	OFF
		1	ON

Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getDevState&usr=admin&pwd=

getDevName

Function	Get camera name	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getDevName	
Param	None	
Return	devName	Camera name
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getDevName&usr=admin&pwd=	

setDevName

Function	Set camera name	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setDevName	
Param	devName	Camera name
Return	None	
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=setDevName&devName=test&usr=admin&pwd=	

getDevInfo

Function	Get camera information	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getDevInfo	
Param	None	
Return	productName	Camera model
	serialNo	Serial no
	devName	Camera name
	mac	Mac address
	year	
	mon	

	day	
	hour	
	min	
	sec	
	timeZone	Time zone
	firmwareVer	Firmware version
	hardwareVer	Hardware version
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getDevInfo&usr=admin&pwd=	

getProductModel

Function	Get camera model number	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductModel	
Param	None	
Return	model	Camera model number
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductModel&usr=admin&pwd=	

getProductModelName

Function	Get camera model name	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductModelName	
Param	None	
Return	modelName	Camera model name
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductModelName&usr=admin&pwd=	

getProductLanguage

Function	Get camera main language	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductLanguage	
Param	None	

Return	language	Camera main language
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductLanguage&usr=admin&pwd=	

getProductSensorType

Function	Get camera sensor type number	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductSensorType	
Param	None	
Return	sensorType	Camera sensor type number
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductSensorType&usr=admin&pwd=	

getProductWifiType

Function	Get camera wifi type number	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductWifiType	
Param	None	
Return	wifiType	Camera wifi type number
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductWifiType&usr=admin&pwd=	

getProductSdFlag

Function	Whether camera support sd card	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductSdFlag	
Param	None	
Return	sdFlag	Camera flag to support sd card-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductSdFlag&usr=admin&pwd=	

getProductOutdoorFlag

Function	Whether camera is outdoor machine	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductOutdoorFlag	
Param	None	
Return	OutdoorFlag	Whether camera is outdoor machine-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductOutdoorFlag&usr=admin&pwd=	

getProductPtFlag

Function	Whether camera is pt machine	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductPtFlag	
Param	None	
Return	ptFlag	Whether camera is pt machine-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductPtFlag&usr=admin&pwd=	

getProductZoomFlag

Function	Whether camera is zoom machine	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductZoomFlag	
Param	None	
Return	zoomFlag	Whether camera is zoom machine-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductZoomFlag&usr=admin&pwd=	

getProductRs485Flag

Function	Whether camera support rs485	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductRs485Flag	
Param	None	

Return	rs485Flag	Whether camera support rs485-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductRs485Flag&usr=admin&pwd=	

getProductIoAlarmFlag

Function	Whether camera support IO alarm	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductIoAlarmFlag	
Param	None	
Return	ioAlarmFlag	Whether camera support IO alarm-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductIoAlarmFlag&usr=admin&pwd=	

getProductOnvifFlag

Function	Whether camera support Onvif	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductOnvifFlag	
Param	None	
Return	onvifFlag	Whether camera support onvif-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductOnvifFlag&usr=admin&pwd=	

getProductP2pFlag

Function	Whether camera support P2p	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductP2pFlag	
Param	None	
Return	p2pFlag	Whether camera support p2p-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductP2pFlag&usr=admin&pwd=	

getProductWpsFlag

Function	Whether camera support Wps	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductWpsFlag	
Param	None	
Return	wpsFlag	Whether camera support wps-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductWpsFlag&usr=admin&pwd=	

getProductAudioFlag

Function	Whether camera support audio-speak	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductAudioFlag	
Param	None	
Return	audioFlag	Whether camera support audio for speak-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductAudioFlag&usr=admin&pwd=	

getProductTalkFlag

Function	Whether camera support audio-talk	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductTalkFlag	
Param	None	
Return	talkFlag	Whether camera support audio for talk-0:no,1:yes
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductTalkFlag&usr=admin&pwd=	

getProductAppVer

Function	Get camera application version	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductAppVer	
Param	None	

Return	appVer	camera application version
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductAppVer&usr=admin&pwd=	

getProductAllInfo

Function	Get camera Information	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getProductAllInfo	
Param	None	
Return	model	Model number
	modelName	Model Name
	language	Main language
	sensorType	Sensor type number
	wifiType	Wifi Type Number
	reserve1	Reserve
	reserve2	Reserve
	reserve3	Reserve
	reserve4	Reserve
	sdFlag	Whether machine support sd card
	outdoorFlag	Whether machine is outdoor
	ptFlag	Whether machine support pt
	zoomFlag	Whether machine support zoom
	Rs485Flag	Whether machine support rs485
	ioAlarmFlag	Whether machine support io alarm
	onvifFlag	Whether machine support onvif
	p2pFlag	Whether machine support p2p
	wpsFlag	Whether machine support wps
	audioFlag	Whether machine support audio-speak
	talkFlag	Whether machine support audio-talk
reserveFlag1	reserve	
reserveFlag2	reserve	
reserveFlag3	reserve	
reserveFlag4	reserve	

	appVer	Camera application version
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getProductAllInfo&usr=admin&pwd=	

getGeneratePubKey

Function	Get public key generated by camera for software reset	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getGeneratePubKey	
Param	None	
Return	genResult	The result that camera generate public key for software reset
	genPubLen	The length of public key
	pubKey	Public key
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=getGeneratePubKey&usr=admin&pwd=	

toolResetToFactory

Function	Set camera reset to factory by software	
privilege	visitor	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=toolResetToFactory	
Param	codeLen	Code length for camera reset
	code	Code for camera reset
Return	restoreResult	The result that camera reset
Note		
Example	/cgi-bin/CGIProxy.fcgi?cmd=toolResetToFactory&codeLen=10&code=xxxxxxx xxx&&usr=admin&pwd=	

System

rebootSystem

Function	Reboot camera
privilege	admin

Usage	/cgi-bin/CGIProxy.fcgi?cmd=rebootSystem
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=rebootSystem&usr=admin&pwd=

restoreToFactorySetting

Function	Restore to factory setting
privilege	admin
Usage	/cgi-bin/CGIProxy.fcgi?cmd=restoreToFactorySetting
Param	None
Return	None
Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd= restoreToFactorySetting&usr=admin&pwd=

exportConfig

Function	Export config file
privilege	admin
Usage	/cgi-bin/CGIProxy.fcgi?cmd=exportConfig
Param	None
Return	fileName The config name
Note	After call this command, you can get the config file by visit the following addr: /configs/export/configs.bin
Example	/cgi-bin/CGIProxy.fcgi?cmd=exportConfig&usr=admin&pwd=

ImportConfig

Function	Import config file
privilege	admin
Usage	/cgi-bin/CGIProxy.fcgi?cmd=importConfig&usr=admin&pwd=
Param	None
Return	None
Note	System will reboot automatically after this operation

Example	<pre><form name="form5" method="post" target="retframe" enctype="multipart/form-data" action="cgi-bin/ CGIProxy.fcgi?cmd=importConfig&usr=admin&pwd=" > <input type="file" name="setting_file" > <input type="submit" value="import" > </form></pre>
---------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

FwUpgrade

Function	Upgrade firmware		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=fwUpgrade&usr=admin&pwd=		
Param	None		
Return	upgradeResult	0	Upgrade success
		-1	Upgrade fail
Note	System will reboot automatically after this operation. This action may takes about 120s when upgrade app firmware, takes about 60s when upgrade system firmware		
Example	<pre><form name="form5" method="post" target="retframe" enctype="multipart/form-data" action="cgi-bin/ CGIProxy.fcgi?cmd=fwUpgrade&usr=admin&pwd=" > <input type="file" name="fw_file" > <input type="submit" value="upgrade" > </form></pre>		

MISC

getFirewallConfig

Function	Get firewall config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getFirewallConfig		
Param	None		
Return	isEnabled	Use firewall or not	
	rule	0	The ip list can't access
		1	Only allow the ip list to access
	ipListN	The ip address(Network address) of list N	

Note	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getFirewallConfig&usr=admin&pwd=

setFirewallConfig

Function	Set firewall config		
privilege	admin		
Usage	/cgi-bin/CGIProxy.fcgi?cmd=setFirewallConfig		
Param	isEnabled	Use firewall or not	
	rule	0	The ip list can't access
		1	Only allow the ip list to access
ipListN	The ip address(Network address) of list N		
Return	None		
Note			
Example	/cgi-bin/CGIProxy.fcgi?cmd=setFirewallConfig&isEnabled=1&rule=0&ipList0=0 &ipList1=0&ipList2=0&ipList3=0&ipList4=0&ipList5=0&ipList6=0&ipList7=0&usr=admin&pwd=		

getLog

Function	Get system log	
privilege	admin	
Usage	/cgi-bin/CGIProxy.fcgi?cmd=getLog	
Param	offset	Where you want to start get log
	count	How many logs you want to get, must less then 20
Return	totalCnt	Total log count
	curCnt	current log count
	logN	log information, consist by time+user+ip+logID
Note	We can have 1000 record of log at most. We can get 10 log at most one time	
Example	/cgi-bin/CGIProxy.fcgi?cmd=getLog&offset=0&count=20&usr=admin&pwd=	

*logID:

- 0: System power on
- 1: Detect motion alarm
- 2: user login
- 3: user logout

4:user off line